

User Manual

ALTIMIUM

SCA51D

Compact Scaler Switcher



All Rights Reserved

Version: SCA51D_2016V1.1

Preface

Read this user manual carefully before using this product. Pictures shown in this manual is for reference only, different model and specifications are subject to real product.

This manual is only for operation instruction only, not for any maintenance usage. The functions described in this version are updated till December 2016. Any changes of functions and parameters since then will be informed separately. Please refer to the dealers for the latest details.

All product function is valid till 2016-12-2.

Trademarks

Product model and its logo are trademarks. Any other trademarks mentioned in this manual are acknowledged as the properties of the trademark owner. No part of this publication may be copied or reproduced without prior written consent.

FCC Statement

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. It has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a commercial installation.

Operation of this equipment in a residential area is likely to cause interference, in which case the user at their own expense will be required to take whatever measures may be necessary to correct the interference

Any changes or modifications not expressly approved by the manufacture would void the user's authority to operate the equipment.



SAFETY PRECAUTIONS

To insure the best from the product, please read all instructions carefully before using the device. Save this manual for further reference.

- Unpack the equipment carefully and save the original box and packing material for possible future shipment
- Follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
- Do not dismantle the housing or modify the module. It may result in electrical shock or burn.
- Using supplies or parts not meeting the products' specifications may cause damage, deterioration or malfunction.
- Refer all servicing to qualified service personnel.
- To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
- Do not put any heavy items on the extension cable in case of extrusion.
- Do not remove the housing of the device as opening or removing housing may expose you to dangerous voltage or other hazards.
- Install the device in a place with fine ventilation to avoid damage caused by overheat.
- Keep the module away from liquids.
- Spillage into the housing may result in fire, electrical shock, or equipment damage. If an object or liquid falls or spills on to the housing, unplug the module immediately.
- Do not twist or pull by force ends of the optical cable. It can cause malfunction.
- Do not use liquid or aerosol cleaners to clean this unit. Always unplug the power to the device before cleaning.
- Unplug the power cord when left unused for a long period of time.
- Information on disposal for scrapped devices: do not burn or mix with general household waste, please treat them as normal electrical wastes.

Table of Contents

1. Introduction	1
1.1 Introduction to SCA51D	1
1.2 Features	1
1.3 Package Contents	1
2. Product Appearance	3
2.1 Front Panel	3
2.2 Rear Panel	4
3. System Connection	6
3.1 Usage Precautions	6
3.2 System Diagram	6
3.3 Connection Procedure	6
3.4 Connection of Microphone	7
3.5 Application	9
4. System Operations	10
4.1 Operations of Buttons	10
4.1.1 Resolution Adjusting	10
4.1.2 Switching Operations	10
4.1.3 Software Updating	11
4.1.4 Volume Adjusting	11
4.1.5 Operations in OSD Menus	11
4.2 Operations of IR	12
4.2.1 IR Remote	12
4.3 Operations of CEC Function	13
4.4 Operations of RS232 Control	14
4.4.1 Installation/ uninstallation of RS232 Control Software	14
4.4.2 Basic Settings	14
4.4.3 RS232 Communication Commands	16
4.5 Operations in OSD Menu	22
4.5.1 Option	22
4.5.2 Picture	24

Compact Scaler Switcher

4.5.3 Sound	25
4.5.4 Setup	25
4.6 Instructions of VGA Converting Cable	26
5. Specification	28
6. Panel Drawing	30
7. Troubleshooting & Maintenance	31
8. After-sales Service	33

1. Introduction

1.1 Introduction to SCA51D

SCA51D is a compact mini scaler switcher with 5 video inputs (3 HDMI, 2 VGA) and 6 audio inputs (3 HDMI audio & 2 VGA audio: switched following the video; 1 MIC audio input). As the VGA input supports VGA, YPbPr and C-video, so the scaler switcher is compliant with multiple video signals.

SCA51D scales & switches any video signal to HDMI output. SCA51D supports various control methods including front panel control, IR control and RS232 command control.

1.2 Features

- Compliant with HDCP.
- Supports CEC, with commands to enable/disable this function.
- Supports video source auto-switching function.
- Output resolutions selectable to assure preferred output, and supports various output resolutions, such as 1920x1200, 1920x1080, 1600x1200, 1360x768, 1280x800, 1280x720, 1024x768.
- VGA video supports C-video, YPbPr and VGA.
- Supports online software upgrading.
- 48V phantom power to support condenser microphone.
- MIC port supports balance/unbalance signal, suppress the external noise effectively.
- 3-level MIC inputs, supports condenser microphone, dynamic microphone and wireless microphone.
- Controllable via button, IR & RS232.
- Powerful OSD operations.

1.3 Package Contents

- 1 x SCA51D
- 2 x Mounting ears (separate from SCA51D)
- 8 x Screws (for mounting ears)
- 7 x Captive screw connectors
- 2 x VGA to YPbPr cables
- 1 x IR receiver
- 1 x RS232 cable
- 4 x Plastic cushions


Compact Scaler Switcher

- 1 x Power Adapter (DC 12V)
- 1 x IR remote
- 1 x Warranty Card
- 1 x Conformity Certificate
- 1 x User Manual

Notes: Please confirm if the product and the accessories are all included, if not, please contact with the dealers.

2. Product Appearance

2.1 Front Panel

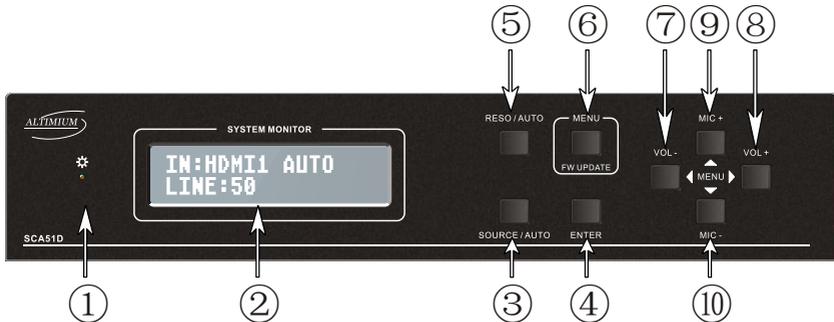

- ① Power indicator
Turn red when power on, turn green when in standby mode.
- ② LCD screen
Show the real-time system working status.
- ③ SOURCE/AUTO
 - Use as video source selection button, press to select one source, press again to select next source, switching circularly between HDMI1, HDMI2, HDMI3, VGA1 and VGA2. The LCD screen will show the name of selected source.
 - Use as switching mode selection button, press and hold on for **7 seconds or more** to enter in Auto-switching mode, press and hold on for **7 seconds or more** again to enter in Manual-switching mode.

Note: Setting any VGA port to AV or YPbPr in Manual-switching mode, the system will not be able to enter in Auto-switching mode. While in Auto-switching mode, setting any VGA port to AV or YPbPr will force the system to enter in Manual-switching mode with LCD screen and RS232 control software prompting “Not support!”


- ④ ENTER
Press to confirm selection in menu.
- ⑤ RESO/AUTO
 - Manual-switching mode: Press this button to select the resolution of HDMI output manually. The resolution can be selected among 1360x768, 1280x800, 1280x720, 1024x768, 1920x1200, 1920x1080 and 1600x1200.
 - Auto-switching mode: Press and hold this button for **7 seconds or more** to enter this mode. This Scaler Switcher will automatically select the highest resolution of HDMI display device.

Press and hold for **7 seconds or more** again can back to Manual-switching mode.

Compact Scaler Switcher

- ⑥ MENU/FWUPDATE
 - Use as menu button, press it to enter in OSD menu.
 - Use as software updating button, press and hold on for **7 seconds or more** to enter in software updating procedure.
- ⑦ VOL-
 - Volume down button, press it to turn down the volume.
 - Use as direction button NEXT when in menus.
- ⑧ MIC+
 - MIC volume up button, press it to turn up the volume of the microphone
 - Use as direction button MOVE UP when in menus.
- ⑨ VOL+
 - Volume up button, press it to turn up the volume
 - Use as direction button PREVIOUS when in menus.
- ⑩ MIC-
 - MIC volume down button, press it to turn down the volume of the microphone
 - Use as direction button MOVE DOWN when in menus.

2.2 Rear Panel

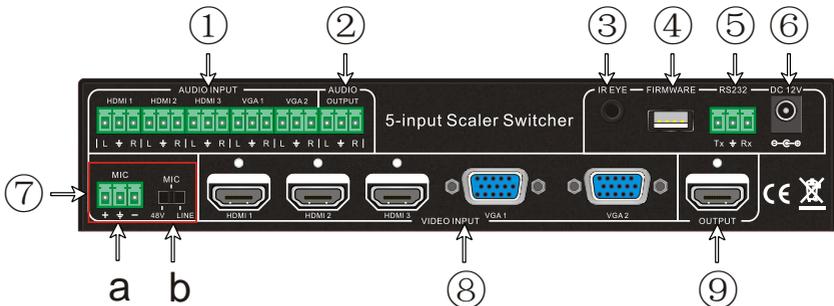

- ① AUDIO INPUT
Including 3 HDMI audio & 2 VGA audio inputs corresponding to the 5 video inputs, users can choose any one audio (embedded HDMI audio or external input audio) for HDMI audio input by sending RS232 commands.
- ② AUDIO OUTPUT
1 Audio output port, connect with an amplifier. The audio comes from the input audio corresponding to the selected video source and mixed with MIC audio.

Compact Scaler Switcher


- ③ IR EYE
Connect with an IR receiver to receive IR signal sent by the IR remote.
- ④ FIRMWARE
USB port, connect with USB flash disk or other storage with update file to update the system firmware.
- ⑤ RS232
Serial control port, 3p captive screw connector, connect with a control device (such as a computer) to control SCA51D.
- ⑥ 12V DC
Power port, connect with the 12V DC power adapter.
- ⑦ MIC
 - a) MIC port, connect with microphone
 - b) MIC Dial switch: 3 levels: 48V phantom power mode (connect with condenser microphone), MIC mode (connect with dynamic microphone) and LINE mode (connect with wireless microphone or line audio).
- ⑧ VIDEO INPUT
Video input ports, includes 3 HDMI inputs & 2 VGA inputs. VGA ports support YPbPr, C-video and VGA format. Factory default is VGA format.
- ⑨ OUTPUT
1 HDMI local output, connect with a HDMI displayer.

3. System Connection

3.1 Usage Precautions

- 1) System should be installed in a clean environment and has a prop temperature and humidity.
- 2) All of the power switches, plugs, sockets and power cords should be insulated and safe.
- 3) All devices should be connected before power on.

3.2 System Diagram

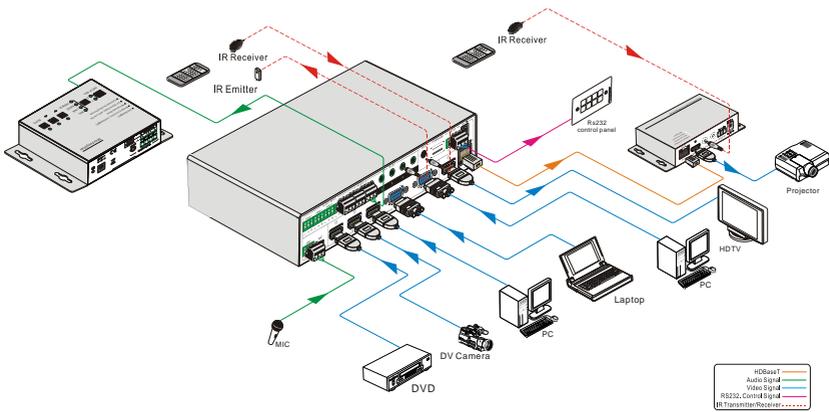

3.3 Connection Procedure

- Step1.** Connect HDMI source devices (e.g. Blue-ray DVD) to HDMI input ports of SCA51D with HDMI cable. Connect VGA source devices (e.g. PC) to VGA input ports of SCA51D with VGA cable.
- Step2.** Connect the corresponding audio source to the corresponding AUDIO INPUT port of SCA51D with audio cable accordingly. The audio of HDMI can be set as embedded or external by sending right commands.
- Step3.** Connect a HDMI display device to HDMI output port of SCA51D with HDMI cable.
- Step4.** Connect speakers, headphones or amplifiers to AUDIO OUTPUT port of SCA51D.
- Step5.** Connect control device (e.g. PC) to the RS232 port of SCA51D.
- Step6.** Select MIC level and connect right microphone to the MIC input port. MIC audio will be transmitted to AUDIO OUTPUT port and mixed with source audio.
- Step7.** Connect DC12V power adaptor to the power port.

Compact Scaler Switcher


3.4 Connection of Microphone

SCA51D provides one 3-level microphone input to accommodate different microphone input modes, including 48V phantom power mode, MIC mode & LINE mode.

➤ 48V phantom power input

When switch to “48V” (It has a good frequency characteristic, high input impedance and high sensitivity in this mode), the MIC input will offer a 48V phantom power. This is only used for **condenser microphone**.

Connect the microphone this way: “+” connects to positive, “-” connects to negative and “ \perp ” to ground.

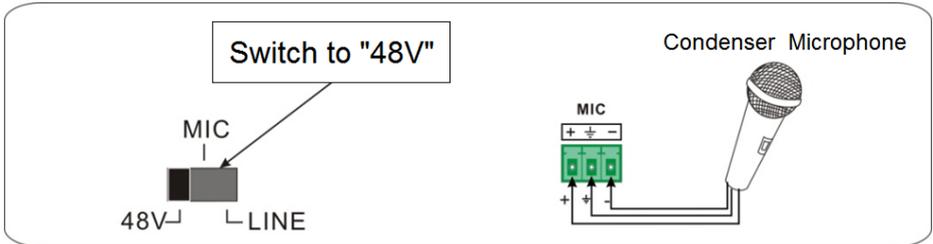


➤ MIC input

When switch to “MIC” (It has a low frequency characteristics, and wide frequency response in this mode), the microphone input is used for connecting with **dynamic microphone**. There are two different connections:

1) Unbalanced connection:

“+” and “ \perp ” connect to ground, and “-” connects to signal.


“-” and “ \perp ” connect to ground, and “+” connects to signal.

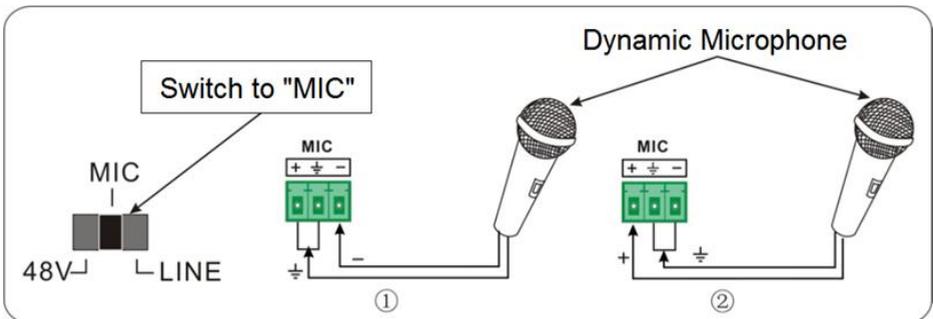

2) Balanced connection:

“+” connects to positive, “-” connects to negative and “ \perp ” connects to ground.

Compact Scaler Switcher

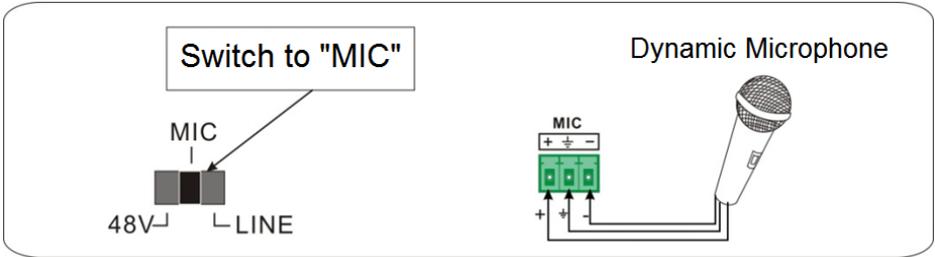


➤ **LINE input**

When switch to "LINE" (It has a low frequency characteristics, and wide frequency response in this mode), the microphone input is used for connecting with line audio or wireless microphone output. There are two different connections:

1) Unbalanced connection:


"+" and "⊥" connect to ground, and "-" connects to signal.

"-" and "⊥" connect to ground, and "+" connects to signal.

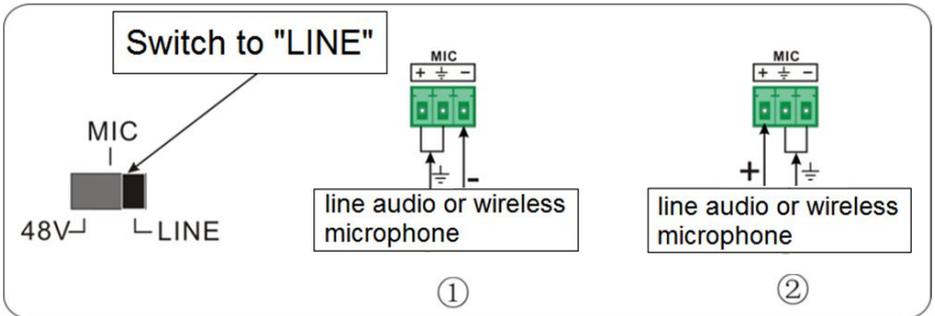

b) Balanced connection:

"+" connects to positive, "-" connects to negative and "⊥" connects to ground.

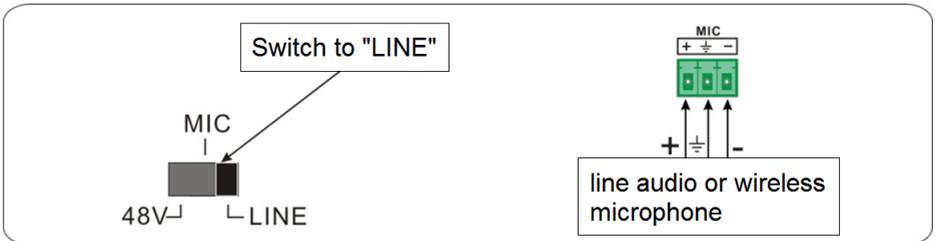

3.5 Application

SCA51D has a good application in various occasions, such as computer realm, monitoring, conference room, big screen displaying, television education, command & control center and smart house etc.

4. System Operations

4.1 Operations of Buttons

The buttons can be used for output resolution adjusting, switching operations, software updating, volume adjusting and operations in menus.

4.1.1 Resolution Adjusting

Support auto-adjusting and manual-adjusting. Press and hold on **RESO/AUTO** button for **7 seconds or more** to enter in auto-adjusting/manual-adjusting mode.

Notice:

1. In auto-adjusting mode, SCA51D will choose the resolution of the display device as the preferred resolution.
2. In auto-switching mode, front panel button control is not available, but IR and RS232 control is able to switch modes.

4.1.2 Switching Operations

Support auto-switching and manual-switching. Press and hold on **SOURCE/AUTO** button for **7 seconds or more** to enter in auto-switching/manual-switching mode.

The display result is showed as below:



The display result will be showed for **2 seconds**.

Auto-switching function

The auto-switching mode follows the listed principles:

- **New input principle**
Once detecting a new input signal, SCA51D would switch to this new signal automatically.
- **Power rebooting principle**
SCA51D offers the function to remember the signal last displayed when rebooting. Once rebooting, SCA51D will automatically enter in auto-switching mode, and then detect all inputs and memorize their connection status for future rebooting using.
And if the signal last displayed is still available, then SCA51D will output the signal. If not, there will be no signal on outputs.
- **Signal removing principle**
Once removing the current display signal, SCA51D will detect all input signals with

Compact Scaler Switcher

priority (from INPUT 1 to INPUT 5). It will output the signal firstly detected to be available.

Notice: Auto-switching function works only when there is new input signal, or when users remove a signal or power rebooting. With any VGA port set to AV or YPbPr, the system will be not able to enter in Auto-switching mode.

Operation Examples:

- Connect the INPUT 2, INPUT 4, and INPUT 5 ports to the source devices, select INPUT 4 to outputs.
- Press and hold on the front key **SOURCE/AUTO** for **7 seconds or more** to enter in auto-switching mode.
- With no signal removing or new input, SCA51D just works in auto-switching mode, and take no action (Output from INPUT 4)
- Connect INPUT 3 with a source device, and then it will choose INPUT 3 to output.
- Remove the signal of INPUT 3, SCA51D will detect from INPUT 1 to INPUT 5. And when it detects that input 2 is available, it will choose INPUT 2 to output.
- Cut off the power of SCA51D, then reboot. As SCA51D is in auto-switching mode, then it will choose INPUT 2 to output.

4.1.3 Software Updating

Software updating means to update the inside program of this scaler switcher.

SCA51D supports software updating via USB flash disk. The Operation is:

- 1) Copy the file "**MERGE_51D.bin**" to the root directory of a USB flash disk. (Make sure the file is copied to the root directory for normal use.
- 2) Plug the USB flash disk to the SCA51D USB port on its front panel.
- 3) Press the button "MENU" for **7 seconds or more** to update the software automatically.

Or press this button for 1 second to open the OSD menu "Option" → Select "Software Update" to enter in update procedure.

Or send command **50698%** to update software.

4.1.4 Volume Adjusting

Not in OSD menu, press VOL -- to decrease line volume, VOL + to increase.

Not in OSD menu, press MIC – to decrease MIC volume, MIC + to increase.

4.1.5 Operations in OSD Menus

Press **MENU** button to enter in the OSD menu, and use **UP, DWON, LEFT, RIGHT**

Compact Scaler Switcher

button to select, press **ENTER** button to confirm selection. **MENU** button also can be used to exit present menu level by level until exiting the OSD menu.

4.2 Operations of IR

4.2.1 IR Remote

With its CEC function, users are able to control the SCA51D and source devices synchronously via one IR remote.



- ① **Standby button**
To enter in/ exit standby mode.
- ② **Input channel selection buttons**
INPUT 1 is for HDMI1, INPUT 2 for HDMI2...INPUT 5 for VGA2. **AUTO** button: Enable/disable auto-switching mode.
- ③ **Volume adjusting buttons**
MIC-/+: decrease/increase MIC volume
LINE-/+: decrease/increase line volume
MIC MUTE: mute/unmute MIC audio
LINE MUTE: mute/unmute line audio
- ④ **Menu operation buttons**
MENU: press to enter in OSD menu or used to return to previous menu. **EXIT**: exit OSD menu.
OK: confirm button. **Navigation buttons**: UP/DWON/LEFT/ RIGHT button, for value setting or page-turn, Buttons in area **a** are also able to work in CEC mode to enter the menu of HDMI source device. **P.P, ZOOM, S.M**: shortcut button, to select display mode.
- ⑤ **Resolution selection buttons**
Select the resolution by pressing corresponding button. **AUTO** is for auto-selecting the best resolution.
- ⑥ **CEC function buttons**
These are for HDMI input signal which supports CEC. Include PLAY, PAUSE, STOP, MENU, REV (reverse) and FWD (forward).
Buttons in section a work when entered CEC too.

Compact Scaler Switcher

4.3 Operations of CEC Function


SCA51D supports CEC and CEC standby functions, and can be enabled/ disabled through RS232 commands or OSD menu. If the HDMI source device supports CEC and its CEC is on, and when SCA51D enter in standby/startup mode, then source device will automatically enter in standby/startup mode.

And due to CEC function, user can control HDMI source device with basic operations (play, pause, fast forward, fast reverse, menu etc.). So user is able to control SCA51D and HDMI source device via the IR remote of SCA51D.

Commands for CEC function: “50686%” (enable CEC) and “50687%” (disable CEC).

The working status related to CEC and STANDBY is showed as below:

Situation	Working Status
CEC: on, Standby: on	Press STANDBY button on IR remote, SCA51D enters in standby mode, so do all HDMI source devices. Press STANDBY button again on IR remote, SCA51D exits standby mode, only the HDMI source device switched to starts working.
CEC: on, Standby: off	Press STANDBY button on IR remote, SCA51D enters in standby mode, HDMI 1~3 source devices keep on.
CEC: on	Use CEC function buttons, ▲, ▼, ◀, ▶ and OK buttons on IR remote to control HDMI source devices, include play, pause, fast forward, fast reverse and operations in menu.
CEC: off	Unable to control HDMI source devices through IR remote

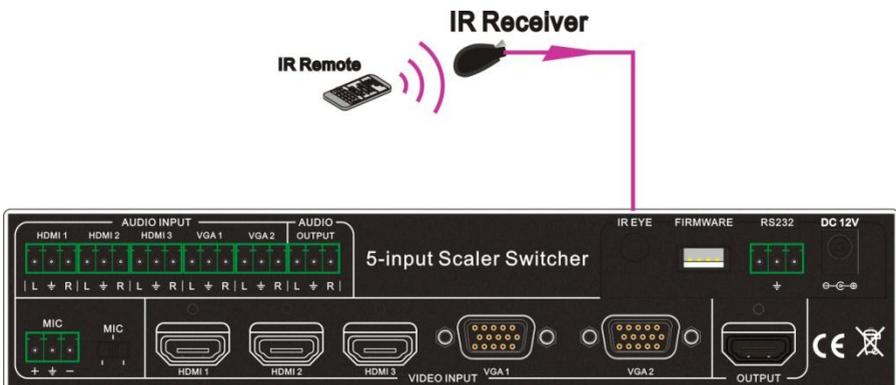

CEC: Control HDMI source devices by IR remote

4.4 Operations of RS232 Control

SCA51D can be controlled by sending RS232 commands. Connect the RS232 port of SCA51D and the RS232 port of control device (e.g. a PC). Install the RS232 control software to the control device, then users are able to control the SCA51D by sending RS232 commands. Here is a operation guidance for RS232 control.

4.4.1 Installation/ uninstallation of RS232 Control Software

- **Installation** Copy the control software file to the computer connected with SCA51D.
- **Uninstallation** Delete all the control software files in corresponding file path.

4.4.2 Basic Settings


First to connect SCA51D with all input devices and output devices needed, then to connect it with a computer which is installed with RS232 control software. Double-click the software icon to run this software.

Here we take the software **CommWatch.exe** as example. The icon is showed as below:



The interface of the control software is showed as below:

Compact Scaler Switcher

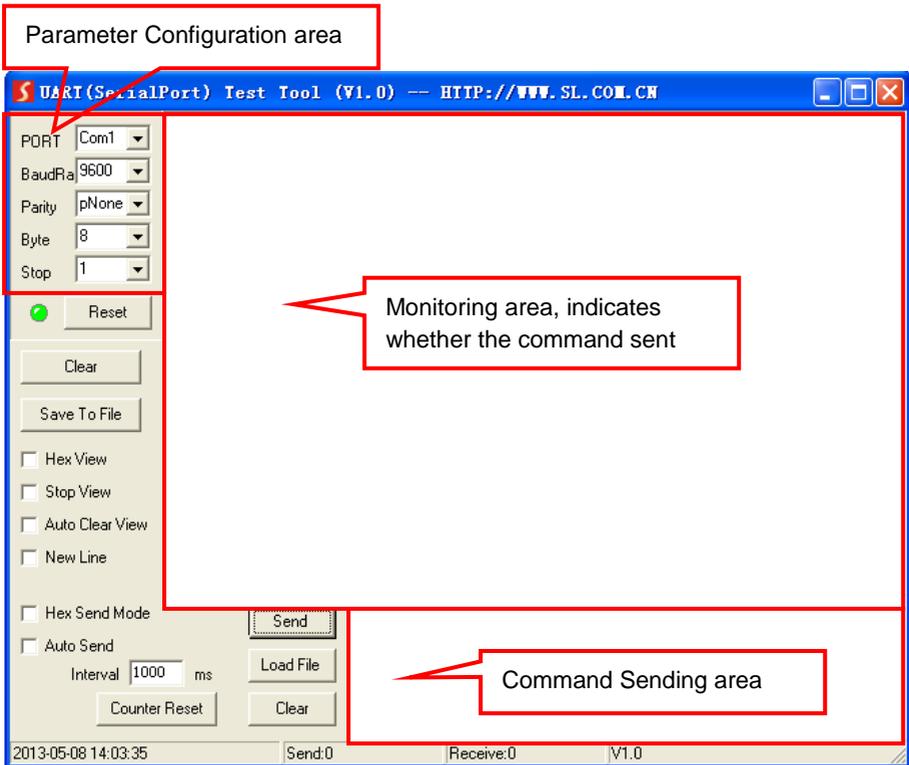

Please set the parameters of COM number, bound rate, data bit, stop bit and the parity bit correctly, and then you are able to send commands in Command Sending Area.

Compact Scaler Switcher

4.4.3 RS232 Communication Commands

Communication protocol: RS232 Communication Protocol

Baud rate: 9600

Data bit: 8

Stop bit: 1

Parity bit: none

Command	Function	Feedback Example
Switch Commands		
50701%	Switch to HDMI 1 input	Switch to HDMI 1
50702%	Switch to HDMI 2 input	Switch to HDMI 2
50703%	Switch to HDMI 3 input	Switch to HDMI 3
50704%	Switch to VGA 1/YPbPr 1/AV 1 input	Switch to VGA 1/YPbPr 1/AV 1
50705%	Switch to VGA 2/YPbPr 2/AV 2 input	Switch to VGA 2/YPbPr 2/AV 2
50680%	Select VGA 1 for INPUT 4	Input 4 Set & Switch to VGA 1
50681%	Select YPbPr 1 for INPUT 4	Input 4 Set & Switch to AV 1
50682%	Select AV 1 for INPUT 4	Input 4 Set & Switch to AV 1
50683%	Select VGA 2 for INPUT 5	Input 5 Set & Switch to VGA 2
50684%	Select YPbPr 2 for INPUT 5	Input 5 Set & Switch to YPbPr 2
50685%	Select AV 2 for INPUT 5	Input 5 Set & Switch to AV 2
50785%	Enable auto-switching	Auto Switching
50786%	Disable auto-switching	Manual Switching
Audio Commands		
50600%	MUTE line audio	LINE Mute
50601%	UnMute line audio	LINE Unmute
50602%	Line audio volume up	LINE Volume: xx
50603%	Line audio volume down	LINE Volume: xx
50720%	Mute LINE audio & MIC audio	LINE Mute
		MIC Mute
50721%	Unmute LINE audio & MIC audio	LINE Unmute
		MIC Unmute
50722%	Mute MIC audio	MIC Mute
50723%	Unmute MIC audio	MIC Unmute
50694%	Enable Mic precedence	Mic precedence: enable
50695%	Disable Mic precedence	Mic precedence: disable

Compact Scaler Switcher

Command	Function	Feedback Example
50696%	Check Mic precedence status	Mic precedence: XXXX
50724%	MIC volume up	MIC Volume: xx
50725%	MIC volume down	MIC Volume: xx
508xx%	Set MIC volume	MIC Volume: xx
50706%	Choose embedded audio as HDMI 1 audio input	HDMI 1 Audio from Embedded
50707%	Choose external audio as HDMI 1 audio input	HDMI 1 Audio from LINE
50708%	Choose embedded audio as HDMI 2 audio input	HDMI 2 Audio from Embedded
50709%	Choose external audio as HDMI 2 audio input	HDMI 2 Audio from LINE
50710%	Choose embedded audio as HDMI 3 audio input	HDMI 3 Audio from Embedded
50711%	Choose external audio as HDMI 3 audio input	HDMI 3 Audio from LINE
Resolution Commands		
50619%	Change the resolution to 1360X768 HD	Resolution: 1360x768
50626%	Change the resolution to 1024X768 XGA	Resolution: 1024x768
50627%	Change the resolution to 1280X720 720P	Resolution: 1280x720
50628%	Change the resolution to 1280X800 WXGA	Resolution: 1280x800
50629%	Change the resolution to 1920X1080 1080P	Resolution: 1920x1080
50620%	Change the resolution to 1920X1200 WUXGA	Resolution: 1920x1200

Compact Scaler Switcher

Command	Function	Feedback Example
50621%	Change the resolution to 1600X1200 UXGA	Resolution: 1600x1200
Setup Commands		
50604%	Lock the front panel buttons	Front Panel lock
50605%	Unlock the front panel buttons	Front Panel Unlock
501xx%	Set the volume to xx. XX ranges from 0 to 60	LINE Volume: xx
502xx%	Set the brightness to xx. XX ranges from 0 to 99	Brightness: xx
503xx%	Set the contrast to xx. XX ranges from 0 to 99	Contrast: xx
504xx%	Set the saturation to xx. XX ranges from 0 to 99	Saturation: xx
505xx%	Set the sharpness to xx. XX ranges from 0 to 99	Sharpness: xx
50607%	Adjust the color temperature	Color Temperature: xx
50608%	Set the aspect ratio	Aspect Ratio: xx
50614%	Set the picture mode	Picture Mode: xx
50615%	Set SM audio mode	Sound Mode: xx
50655%	Freeze output image	Freeze: enable
50656%	Cancel the freezing of output image	Freeze: disable
50646%	Enable MIC Volume Icon display	Volume Icon: enable
50647%	Disable MIC Volume Icon display	Volume Icon: disable
50648%	Enable HDMI embedded audio output	Embedded Audio Output: enable
50649%	Disable HDMI embedded audio output	Embedded Audio Output: disable
50761%	Not display mute icon of LINE audio	LINE Mute Icon: disable
50762%	Display mute icon of LINE audio	LINE Mute Icon: enable
50763%	Not display mute icon of MIC audio	MIC Mute Icon: disable
50764%	Display mute icon of MIC audio	MIC Mute Icon: enable
50765%	Display freeze icon	Freeze Icon: enable

Compact Scaler Switcher

Command	Function	Feedback Example
50766%	Not display freeze icon	Freeze Icon: disable
50644%	Display channel status	Input Icon: enable
50645%	Not display channel status	Input Icon: disable
50650%	Check the channel status	Input Icon: xx
50606%	Auto-adjust the input parameter(VGA only)	VGA Input Auto
50699%	Check the system version	Version Vx.x.x
50688%	Enable MIC noise detecting	MIC detect: enable
50689%	Disable MIC noise detecting	MIC detect: disable
50690%	Check MIC noise detecting statue	MIC detect: XXXX
50791%	HDCP Active	HDCP Active
50792%	HDCP Manual	HDCP Manual
50793%	Enable HDCP output	HDCP ON
50794%	Disable HDCP output	HDCP OFF
50795%	Inquire HDCP/ Active HDCP	HDCP Active
	Inquire HDCP/ Manual HDCP	HDCP Manual
		HDCP OFF/ON
50782%	EDID management, copy the best resolution data of one output to HDMI input	Manage HDMI input with preferred timing
		timing table=[1]
		Resolution:1920x1080
50697%	Exit standby mode	Wake up!
50797%	Enter standby mode	Go to standby!
50698%	Software update	
50617%	Reset to factory defaults	Factory Reset
Menu Commands		
50609%	OK for OSD selection	Key: ok
50610%	LEFT button	Key: left
50611%	RIGHT button	Key: right

Compact Scaler Switcher

Command	Function	Feedback Example
50612%	UP button	Key: up
50613%	DOWN button	Key: down
50616%	MENU button (enter OSD)	OSD: Enter
50618%	EXIT button (exit OSD)	OSD: Exit
Inquire Commands		
50630%	Check the volume level	LINE Volume: xx
		MIC Volume: xx
50631%	Check the input source	Input: xx
50632%	Check the output resolution	Resolution: xx
50633%	Check the image mode	Picture Mode: xx
50634%	Check the audio mode	Sound Mode: xx
50635%	Check the image aspect ratio	Aspect Ratio: xx
50636%	Check the brightness	Brightness: xx
50637%	Check the contrast	Contrast: xx
50638%	Check the saturation	Saturation: xx
50639%	Check sharpness	Sharpness: xx
50640%	Check the color temperature	Color Temperature: xx
50651%	Check Volume Icon display status	Volume Icon: xxxx
50652%	Check Digital audio output status	Embedded Audio Output: enable/disable
50712%	Check the audio input sources for HDMI 1, 2, 3	HDMI1 Audio from XXXX port
		HDMI2 Audio from XXXX port
		HDMI3 Audio from XXXX port
50751%	Check whether the LINE audio is mute or not	LINE Mute/Unmute
50752%	Check whether the MIC audio is mute or not	MIC Mute/Unmute
50753%	Check the freeze status	Freeze: enable/disable
50754%	Check the panel locked status	Front Panel Lock/UnLock
50783%	Display statuses including MIC, LINE	Line Volume:XX

Compact Scaler Switcher

Command	Function	Feedback Example
	audio, Resolution, Output Audio on/off, Manual/ Auto-switching modes	Mic Volume:XX
		Source:XXXX
		Resolution:XXXX
		Digital Sound Output: XXXX
		Switch status: XXXX
Adjustment Commands		
50678%	Enable screen output adjusting	Enter Output Position Adjust
50679%	Disable screen output adjusting	Exit Output Position Adjust
50670%	Move the image to left	Output Position Adjust X xx
50671%	Move the image to right	Output Position Adjust X xx
50672%	Move the image up	Output Position Adjust Y XX
50673%	Move the image down	Output Position Adjust Y xx
50674%	Stretch left from left side (increase image width)	Output Width Adjust xx
50675%	Pull right from left side (decrease image width)	Output Width Adjust xx
50676%	Stretch upwards from top side (increase image height)	Output Height Adjust xx
CEC Commands		
50687%	Disable CEC	HDMI CEC OFF
50686%	Enable CEC	HDMI CEC ON
50901%	Play&pause	CEC cmd: play&pause
50902%	Stop	CEC cmd: stop
50903%	Menu	CEC cmd: menu
50904%	Retreat	CEC cmd: rev
50905%	Forward	CEC cmd: fwd
50906%	Up	CEC cmd: up
50907%	Down	CEC cmd: down
50908%	Left	CEC cmd: left

Compact Scaler Switcher

Command	Function	Feedback Example
50909%	Right	CEC cmd: right
50910%	Conform command	CEC cmd: select
50911%	Exit command	CEC cmd: exit

Note:

1. Turn on/ off HDCP auto-management by sending serial commands.
 - a) When HDCP is set to active, whether output source is with HDCP depends on input source. If the input source is with HDCP, so is the output and vice versa.
 - b) When HDCP is set to Manual, whether the output is with HDCP depends on the statue of HDCP. Turn off HDCP, then the output is without HDCP and vice versa.
2. Screen output adjusting avails only when the screen output adjusting is on. Send command 50678% to turn on.
3. CEC commands with grey background avails only when CEC is on.
4. MIC precedence: In Mute mode, if the MIC noise detecting is on, the device will unmute MIC automatically given the outer noise exceeds the limit of noise detecting. Send 50696% to enable MIC precedence, then the device will not be able to change the mute mode no matter how loud the noise is.


4.5 Operations in OSD Menu

SCA51D provides a powerful OSD operation menu, contains 4 parts: optional settings, image settings, audio settings and system setting etc.

Press MENU button on front panel (or MENU button on IR remote/send command **50616%**) to enter in OSD menu, so it is able to do some settings through the OSD menu.

4.5.1 Option

Includes Output Adjust, Input4/5 Select, HDMI1/2/3 Audio select, and Software Update (USB)

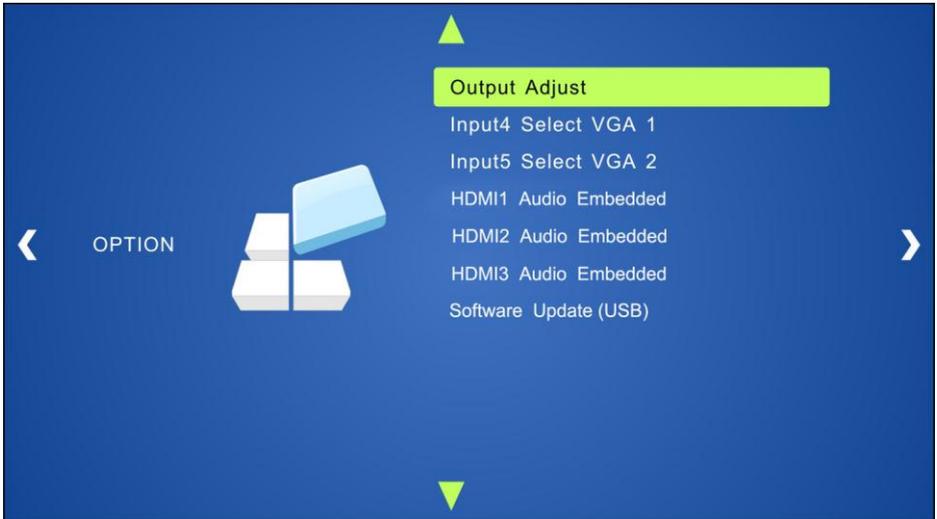

Output Adjust: Adjust output image position (X: horizontal direction and Y: vertical direction) and ratio aspect (width and height).

Input4 Select: Select video source format for VGA input, includes AV 1 (C-video signal), VGA 1 (VGA signal) and YPbPr 1 (Component video signal). Use ENTER button to select the desired source format.

Input5 Select: Select video source for VGA input, includes AV 2 (C-video signal), VGA 2 (VGA signal) and YPbPr 2 (Component video signal). Use ENTER button to select the desired source format.

For INPUT4 & INPUT5, when change for new format signal:

1. Firstly, please select a format through this menu (the signal format changed while the video source is still the same).
2. Secondly, switch off the present signal channel (e.g. switch to another channel).
3. Thirdly, switch to channel INPUT4/INPUT5 again.

HDMI1 Audio Select: switch between Embedded and Line to choose the desired audio output port for HDMI1.

HDMI2 Audio Select: switch between Embedded and Line to choose the desired audio output port for HDMI2.

Compact Scaler Switcher

HDMI3 Audio Select: switch between Embedded and Line to choose the desired audio output port for HDMI3.

Software Update (USB): Insert the USB flash disk with updating file to USB port of SCA51D, to update the software through this menu.

4.5.2 Picture

Including Picture Mode, Color Temperature, Aspect Ratio, Noise Reduction, Screen and Color Range.

Please check the picture below:



Picture mode: Includes Dynamic, Standard, Mild, and User. Only in User mode, will it be able to set the image contrast, brightness, color and sharpness.

Color Temperature: Includes Cool, Medium, Warm and User. And only in User mode, it is able to set values for Red, Green and Blue (RGB).

Aspect Ratio: Includes Auto, 4:3, 16:9, Zoom1, Zoom2, Just Scan, Panorama, and Point To Point. VGA format only supports 4:3, 16:9 and Point to Point.

Noise Reduction (not for VGA format): Includes Off, Low, Middle, High and Default.

Screen: (not for HDMI source): Includes Auto Adjust, Horizontal, Vertical, Size, and Phase.


Compact Scaler Switcher

Color Range (not for VGA format): Includes 0~255 and 16~235, use ENTER button to select the color range.

4.5.3 Sound

Including Sound Mode, Surround Sound and EQ

Please check the picture below:

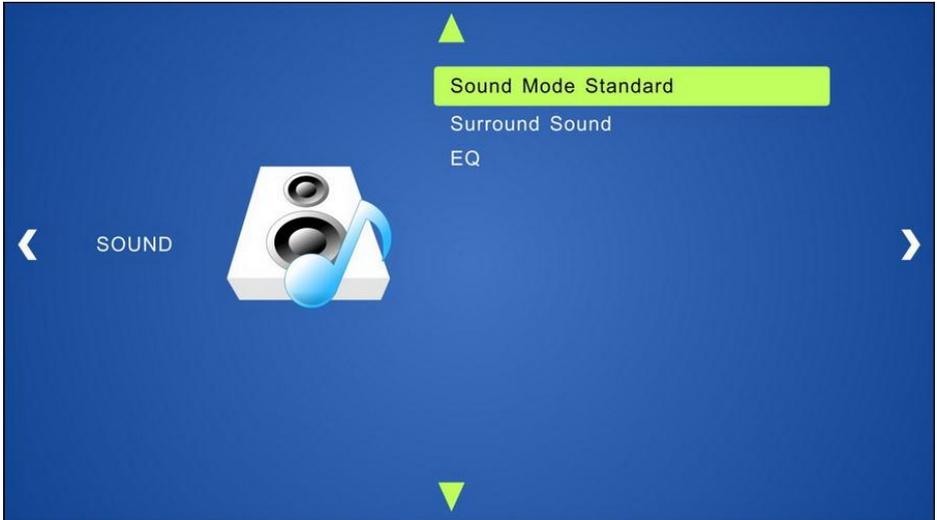


Sound mode: Includes Standard, Music, Movie, Sports and User. Only User mode supports to set treble and bass.

Surround Sound: Includes Off and Surround.

EQ: To adjust the sound balance.

4.5.4 Setup

Including OSD Language, Blending, HDMI CEC and OSD Duration

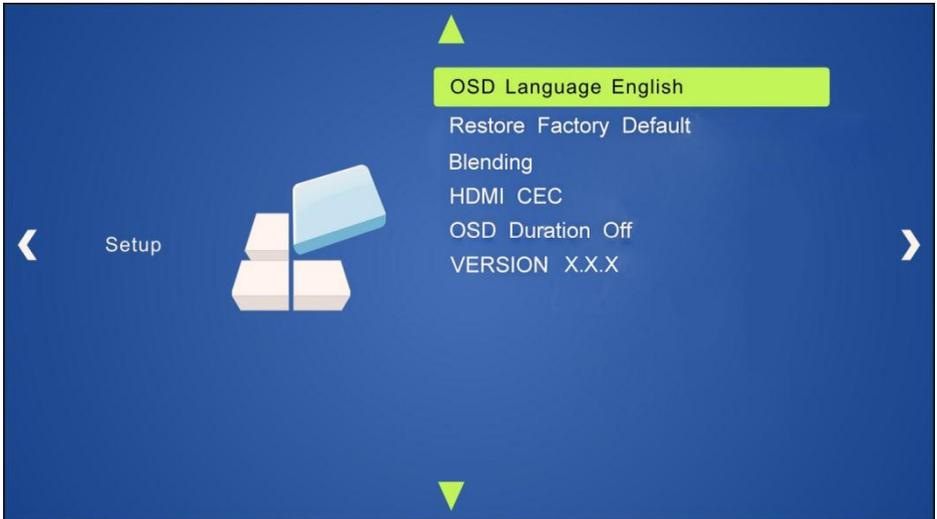

OSD Language: Supports 7 languages, including English (default), Chinese etc.

Restore Factory Default: Restores to original system state

Blending: Includes Low, Middle, High and Off. Use ENTER button to select.

HDMI CEC: Enable/disable CEC and auto-standby function. Default: CEC on, STANDBY on.

OSD Duration: Includes 5 s, 10 s, 15 s and Off. “s” is for Second.

VERSION: Displays software version.

4.6 Instructions of VGA Converting Cable

As VGA source supports YPbPr and C-video source, SCA51D provides with 2 VGA converting cables to compliant with these signals.

When need to select these signals as input source, please switch to channel INPUT 4 (or INPUT 5), and then set the signal type in OSD. And then switch to other input channel and connect INPUT 4 (or INPUT 5) with corresponding source device. At last, please switch to INPUT4 (or INPUT 5) again.

- **Connect with Component Video (YPbPr) Source**

- A. Operation Examples:

1. Via front panel buttons & OSD

Press **MENU** button on front panel to enter in OSD, and then enter in **OPTION** setting menu: set “INPUT 4 Select” to **YPbPr1**, and “INPUT 5 Select” to **YPbPr2**. After setting, press **SOURCE/AUTO** button on front panel to switch to YPbPr1 or

Compact Scaler Switcher

YPbPr2 source.

 
2. Via RS232 commands

Send command **50681%** (or **50684%**) to switch to YPbPr1 (or YPbPr2) source.

3. Via IR remote & OSD

Press **MENU** button on IR remote to enter in OSD, and then enter in **OPTION** setting menu: set "INPUT 4 Select" to **YPbPr1**, and "INPUT 5 Select" to **YPbPr2**. After setting, press **INPUT 4** (or **INPUT 5**) button to switch to YPbPr1 (or YPbPr2) source.

B. Connecting the VGA converting cable like this:



● **Connect with Composite Video (C-VIDEO) Source**

A. Operation Examples:

1. Via front panel buttons & OSD

Press **MENU** button on front panel to enter in OSD, and then enter in **OPTION** setting menu: set "INPUT 4 Select" to **AV1**, and "INPUT 5 Select" to **AV2**. After setting, press **SOURCE/AUTO** button on front panel to switch to AV1 or AV2 source.

 
2. Via RS232 commands

Send command **50682%** (or **50685%**) to switch to YPbPr1 (or YPbPr2) source.

3. Via IR remote & OSD

Press **MENU** button on IR remote to enter in OSD, and then enter in **OPTION** setting menu: set "INPUT 4 Select" to **AV1**, and "INPUT 5 Select" to **AV2**. After setting, press **INPUT 4** (or **INPUT 5**) button to switch to AV1 (or AV2) source.

B. Connecting the VGA converting cable like this:




5. Specification

Video Input		Video Output	
Input	3 HDMI 2 VGA	Output	1 HDMI 1 HDBaseT
Input Connector	3 female HDMI 2 female VGA (15 pin)	Output Connector	1 female HDMI 1 RJ45
Video Signal	HDMI, YPbPr, C-video, VGA	Video Signal	1 HDMI 1 HDBaseT
IR Input		IR Output	
Input	1 IR IN	Output	5 IR OUT
Input Connector	3.5mm mini jack	Output Connector	3.5mm mini jack
Video General			
Resolution Range	1024x768, 1280x720, 1280x800, 1920x1080, 1600x1200, 1920x1200	Bandwidth	HDMI:4.95Gbps(1.6 5Gbps per color) C-Video:150MHz YPbPr: 170MHz VGA: 375MHz
Maximum Pixel Clock	165MHz	Video Impedance	75Ω
Gain	0dB	Input / Output Level	0.5V~2.0Vp-p
HDCP	Compliant with DVI & HDMI 1.3 standards		
Audio Input		Audio output	
Input	3 Dual-mono stereo audio for HDMI 2 Dual-mono stereo audio for VGA (Support C-VIDEO, YPbPr, VGA)	Output	1 stereo
Input Connector	3P captive (3.81mm)	Output Connector	3P captive(3.81mm)
Input Impedance	>4.7kΩ	Output Impedance	75Ω
Audio General			
Frequency Response	20Hz~20K Hz	Stereo Channel Separation	>80dB @1KHz
CMRR	>90dB @20Hz to 20K Hz		
Control Parts			

Compact Scaler Switcher

Control/ Remote	IR remote, Buttons & RS232	Pin Configuration	2 = TX, 3 = RX, 5 = GND
General			
Temperature	-10 ~ +40°C	Humidity	10% ~ 90%
Power Supply	DC12V ± 0.5V	Power Consumption	8W , supply power to SCA51D and TP402PR separately. 16W , SCA51D supplies power to TP402PR.
Dimension (W*H*D)	220x 44x 148mm	Weight	0.65Kg

6. Panel Drawing

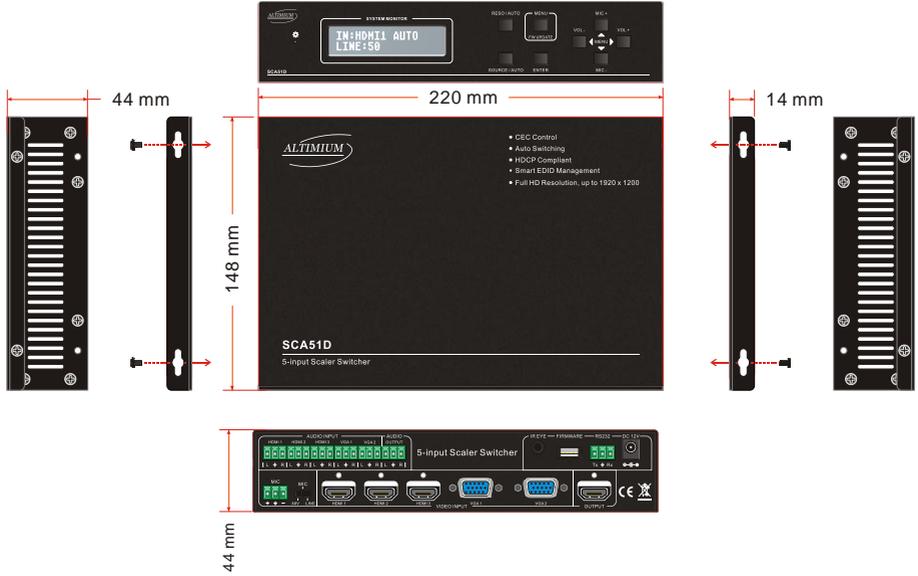

7. Troubleshooting & Maintenance

Problems	Causes	Solutions
Output image with snowflake	Bad quality of the connecting cable	Try another high quality cable.
	Fail or loose connection	Make sure the connection is good
No output image when switching	No signal at the input / output end	Check with oscilloscope or multimeter if there is any signal at the input/ output end.
	Fail or loose connection	Make sure the connection is good
	The switcher is broken	Send it to authorized dealer for repairing.
POWER indicator doesn't work or no respond to any operation	Fail connection of power cord.	Make sure the power cord connection is good.
EDID management does not work normally	The HDMI cable is broken at the output end.	Change for another HDMI cable which is in good working condition.
There is a blank screen on the display when switching	The display does not support the resolution of the video source.	Switch again.
		Manage the EDID data manually to make the resolution of the video source automatically compliant with the output resolution.
Static becomes stronger when connecting the video connectors	Bad grounding	Check the grounding and make sure it is connected well.
Cannot control the device by control device (e.g. a	Wrong RS232 communication parameters	Type in correct RS232 communication

Compact Scaler Switcher

PC) through RS232 port		parameters.
	Broken RS232 port	Send it to authorized dealer for checking.
Cannot control the device by front panel buttons while can control it through RS232 port	The front panel buttons are locked	Send command 50605% to unlock the front panel buttons.
Cannot control the device by RS232 / IR remote / front panel buttons	The device has already been broken.	Send it to authorized dealer for repairing.

If your problem persists after following the above troubleshooting steps, seek further help from authorized dealer or our technical support.

8. After-sales Service

- 1) If there appear some problems when running SCA51D, please check and deal with the problems reference to this user manual. Any transport costs are borne by the users during the warranty.
- 2) You can email to our after-sales department or make a call, please tell us the following information about your cases.
 - Product version and name.
 - Detailed failure situations.
 - The formation of the cases.
- 3) We offer products for **three-year warranty**, which starts from the first day you buy this product (The purchase invoice shall prevail).
- 4) Any problem is same with one of the following cases listed, we will not offer warranty service but offer for charge.
 - Beyond the warranty.
 - Damage due to incorrectly usage, keeping or repairing.
 - Damage due to device assembly operations by the maintenance company non-assigned.
 - No certificate or invoice as the proof of warranty.
 - The product model showed on the warranty card does not match with the model of the product for repairing or had been altered.
 - Damage caused by force majeure.

Remarks: For any questions or problems, please try to get help from your local distributor.



ALTIMIUM

587 Avenue Blaise Pascal

77550 MOISSY-CRAMAYEL

Tél : 01.64.13.31.00

Fax: 01.60.29.62.70

Mail: contact@tesca-audio.com

Web: www.altimum.com